


# ES101B027D Typical System

## ES 1 Page 1 Party with Ambient Level Sensing

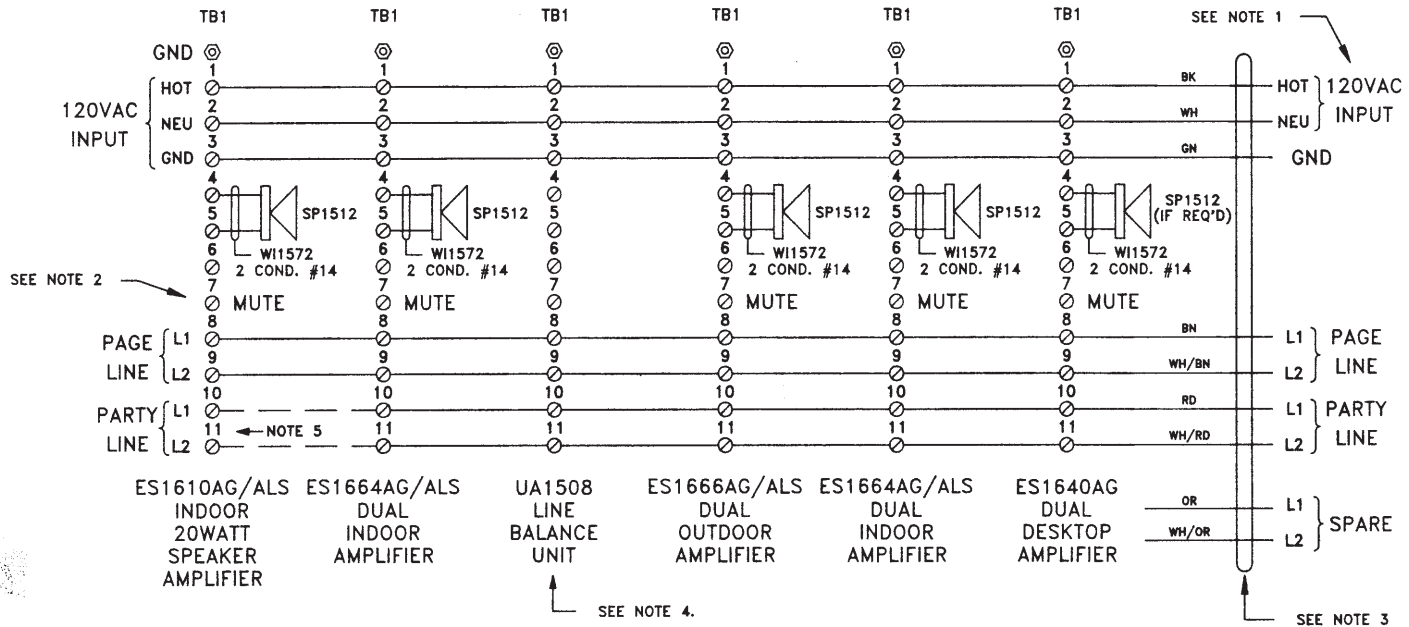

**NOTES:**

- 1: THE 120VAC INPUT CAN BE SUPPLIED LOCALLY IF REQUIRED.
- 2: THE MUTE TERMINAL IS NORMALLY NOT CONNECTED. TO PREVENT ACOUSTIC FEEDBACK FROM ONE STATION TO ANOTHER JUST CONNECT THE MUTE TERMINAL OF ONE UNIT TO THE MUTE TERMINAL OF THE SECOND UNIT.
- 3: REFER TO DRAWING A-1698 FOR CABLE SPECIFICATIONS.
- 4: ONLY ONE LINE BALANCE UNIT (UA1508) IS REQUIRED PER SYSTEM.
- 5: TERMINALS 10 AND 11 CAN BE USED AS TIE POINTS FOR PARTY LINE WIRES.
- 6: ALS UNITS HAVE AMBIENT LEVEL SENSING.